
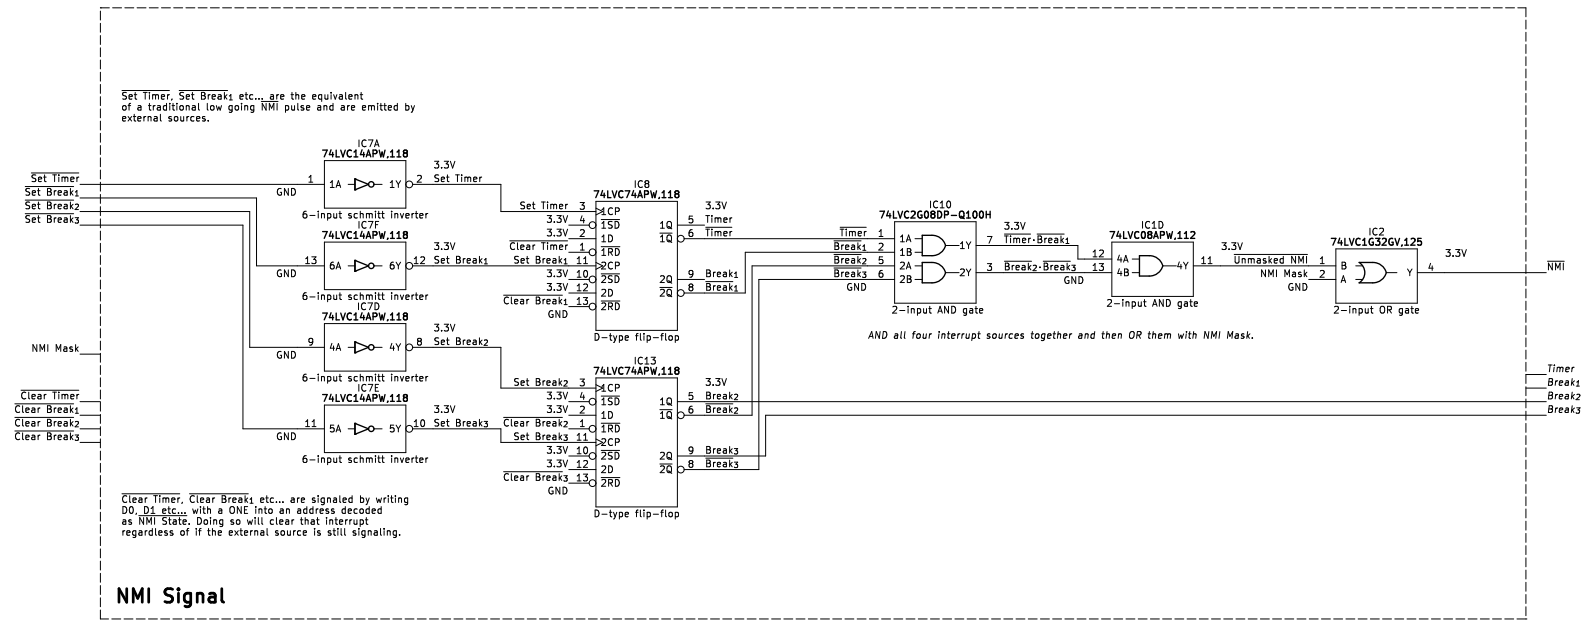



J1
Pin_Header_01x16
J3
Pin_Header_01x16

J2
5V 1 32 NMI
RD 2 31 Set Breaks
WD 3 30 Set Break2
Reset 4 29 Set Break1
GND 5 28 GND
6 27 Set Disable NMI
7 26 Set Enable NMI
D7 8 25 Set Timer
D6 9 24 NMI Enabled
D5 10 23 NMI State
D4 11 22 Breaks
GND 12 21 GND
D3 13 20 Break2
D2 14 19 Breaks
D1 15 18 Timer
D0 16 17 5V
Conn_02x16_Counter-Clockwise


Set Disable NMI and Set Enable NMI
must be low when Reset goes high

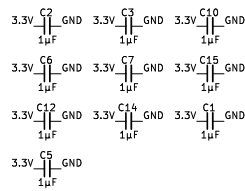


NMI Signal

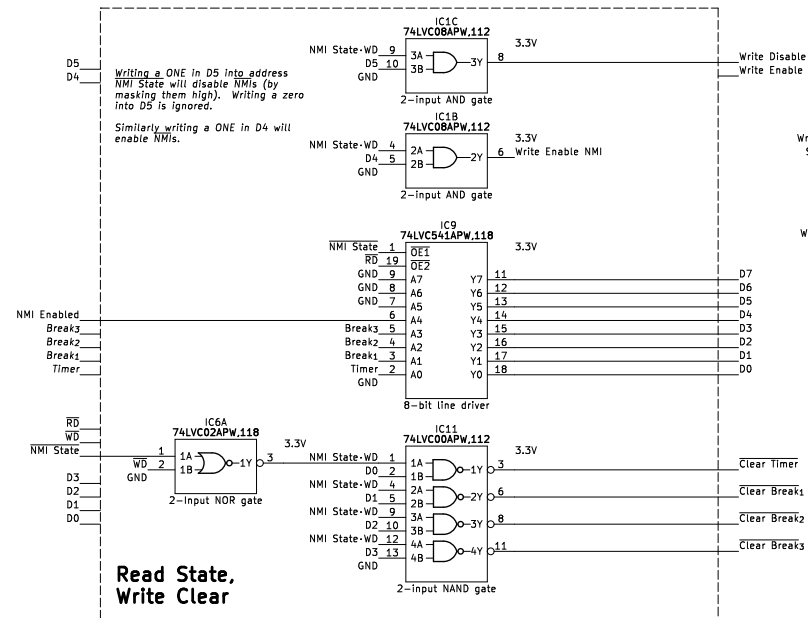

Read State, Write Clear

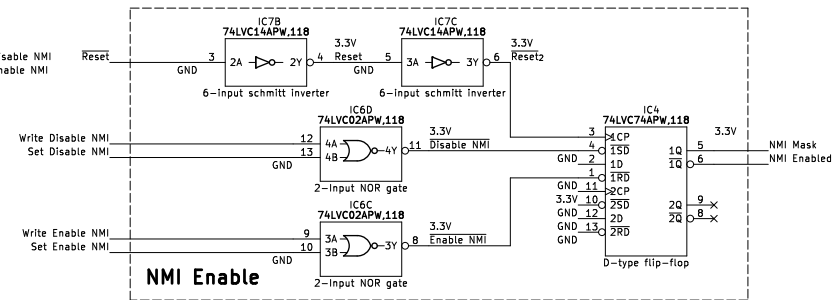

NMI Enable

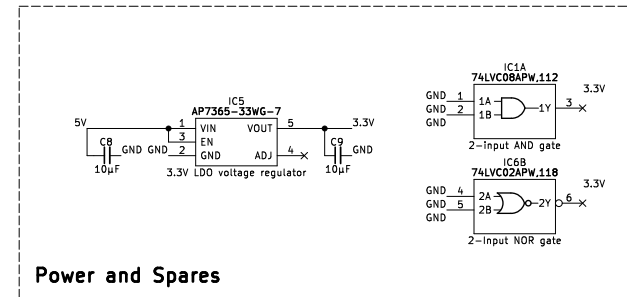

Power and Spares